




Tip Adjust

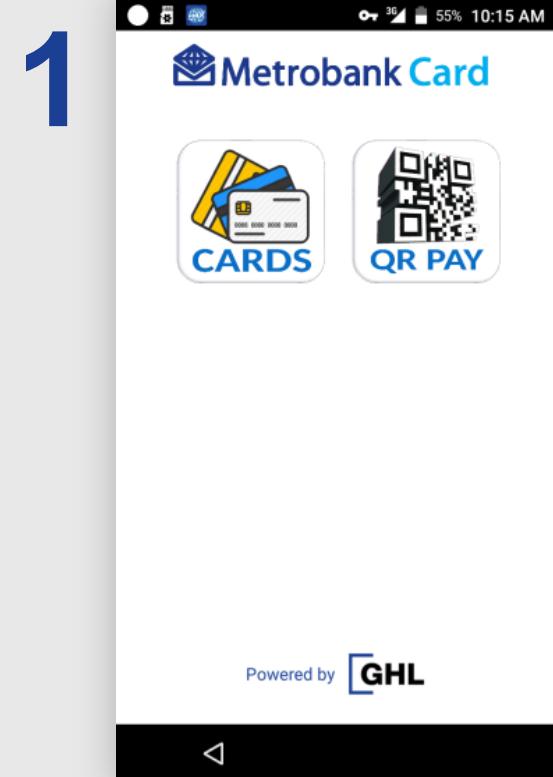


Select Cards Application

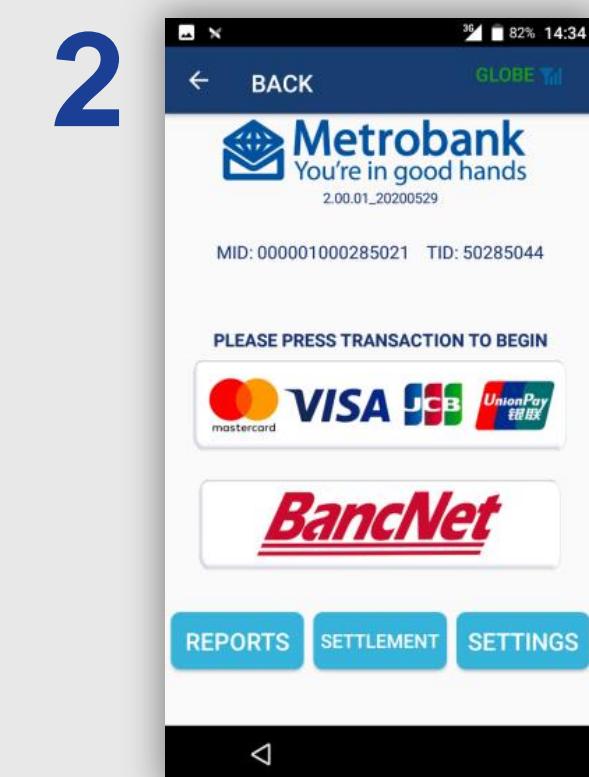


Select Card Payment Option

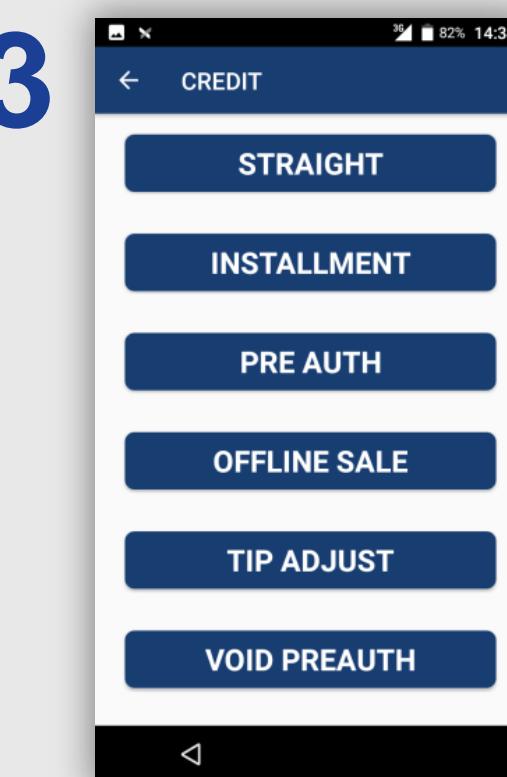


Select Tip Adjust

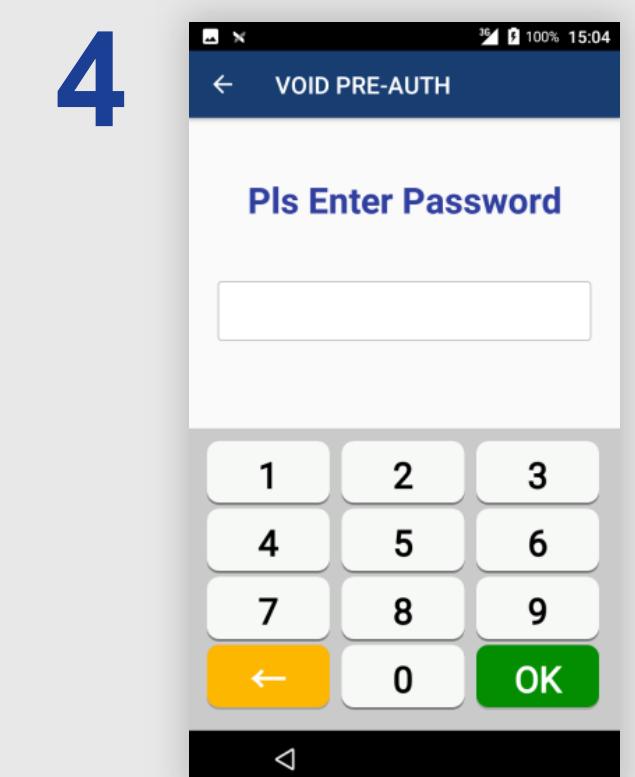


Enter Password

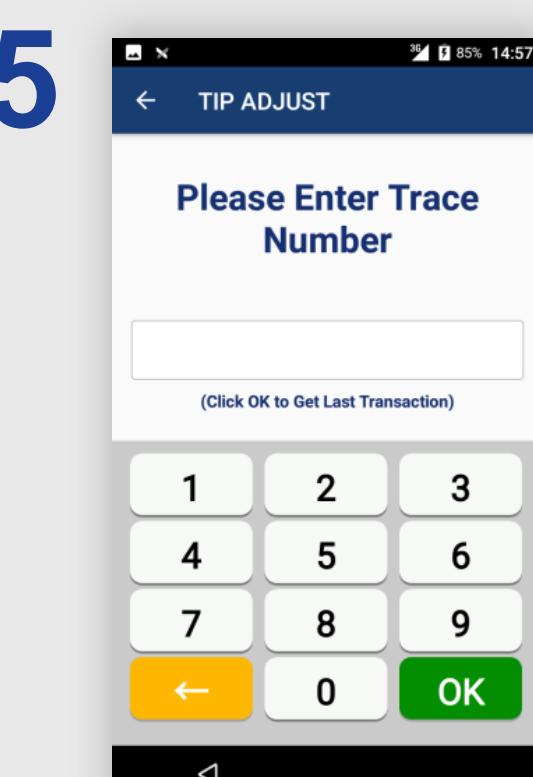

Enter Trace Number
(Note: Leave blank for most recent transaction)

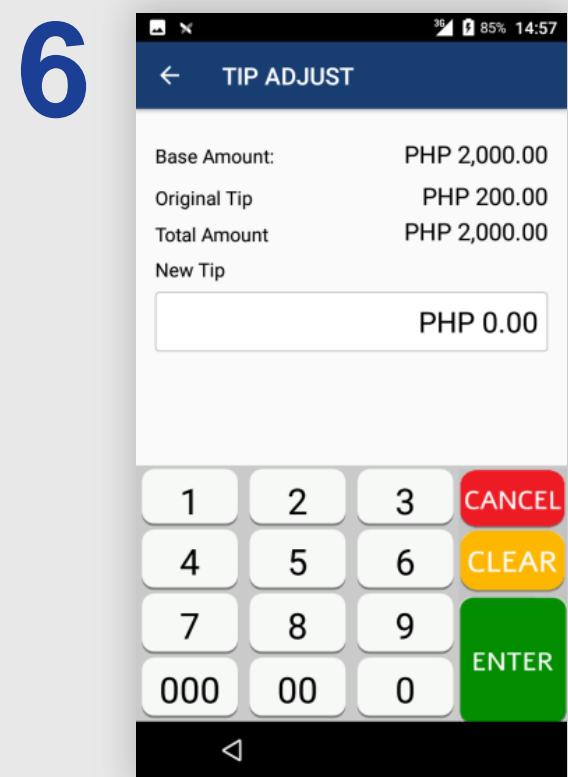

Enter New Tip Amount

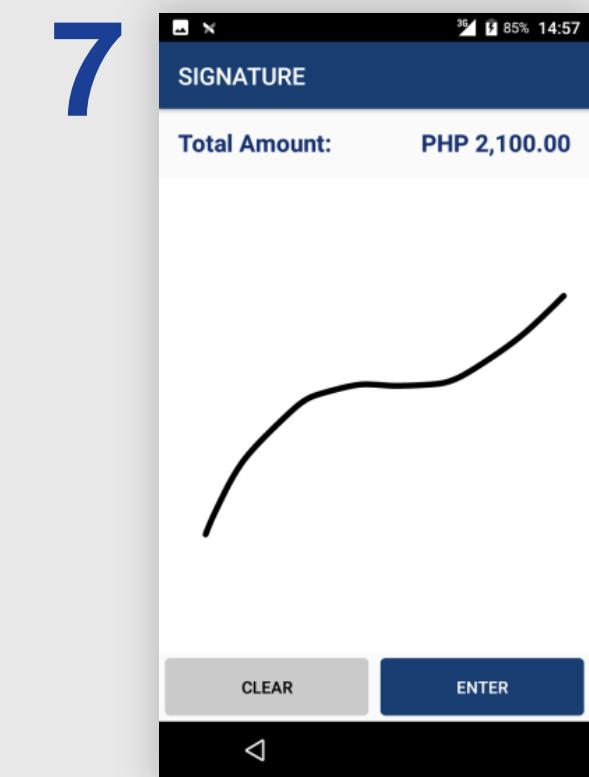

Input e-Signature



Print Receipt